

4. Adjust lower limit

Hold both **DOWN** and **STOP** on controller.

5 SECS

MOTOR RESPONSE

Hold both **DOWN** and **STOP** on controller.

5 SECS

MOTOR RESPONSE

Move shade to desired lowest position by pressing the **DOWN** arrow.

To save lower limit, hold both **DOWN** and **STOP**

3. Set top limit

hold both **UP** and **STOP**.

5 SECS

MOTOR RESPONSE

hold both **UP** and **STOP**.

5 SECS

MOTOR RESPONSE

To save upper limit, hold both **UP** and **STOP**.

5 SECS

MOTOR RESPONSE

Set lower limit

2. Change motor direction

To reverse shade direction, hold both **UP** and **DOWN** until the motor responds.

2 SECS

MOTOR RESPONSE

1. Pair shade to remote

Select channel on controller.

15

Hold **P1** button on motor head.

Hold **P1** button on controller.

2 SECS

MOTOR RESPONSE

Release **P1** button on motor head.

Hold **STOP** on controller.

AUTOMATE™
A DIVISION OF ROLLESEACMEDA

+1 203-590-5318

ustechsupport@rolleseeacmeda.com



automateshades.com



Voice Control



Home Automation Integration



Sunrise & Sunset Detection



Live Feedback



ROOMS

Group Automate shades by room and conveniently control them accordingly.



 
SCENES

Personalise shade control and organise how your shades operate by specific daily events.




TIMERS

Set and forget. Lower, raise and activate shade scenes automatically at the optimal time.



MULTIPLE SHADE TYPES

 Awnings, Roller shades, External shades, Cellular ... Control every shade type from one screen.






AUTOMATE™
A DIVISION OF ROLLESEACMEDA

Quick Programming Guide



  5. Adjust upper limit



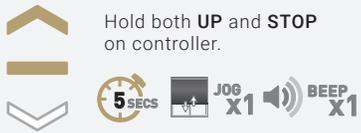


MOTOR RESPONSE



**Not required for setup*

  6. Set/Delete a Favorite Position

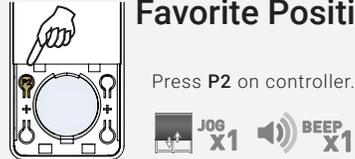


MOTOR RESPONSE



**Not required for setup*

7. Create/Delete groups using P2


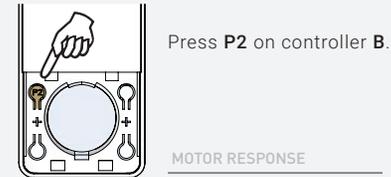


MOTOR RESPONSE



**Not required for setup*

 8. Adjust Motor Speed

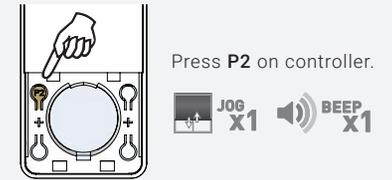

MOTOR RESPONSE




**Not required for setup*

9. Lock Remote




To switch modes, hold right **LOCK** button for **5 seconds**.

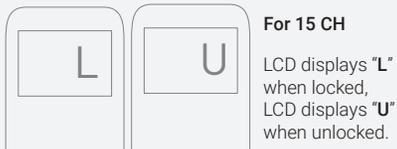

For 15 CH

 LCD displays "L" when locked, LCD displays "U" when unlocked.



For 1 CH

LED solid on when locked LED blinking when unlocked

**Not required for setup*

10. Hide Channels

Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels. Inactive channels will not be visible when scrolling through the CH selection.



Press "STOP" and "CH"




Continue to hold "CH" and press "UP" or "DOWN" to select channels



Press "STOP" to lock in

**Not required for setup*

11. Setting Modes

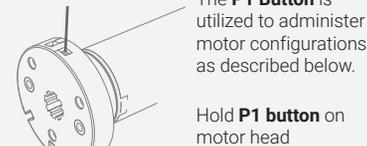

The **P1 Button** is utilized to administer motor configurations as described below.

Hold **P1 button** on motor head

ACTIVE PAIRING MODE



SLEEP MODE



REVERSE DIRECTION



RESET TO FACTORY SETTINGS



**Not required for setup*

12. Step Mode

Default motor mode is Roller after initial Limits have been set, use following steps to change to Step Mode.



If motor is in Step Mode, use following steps to change to Roller Mode



**Not required for setup*